



Is My ELD Connected?

ELD Connected:

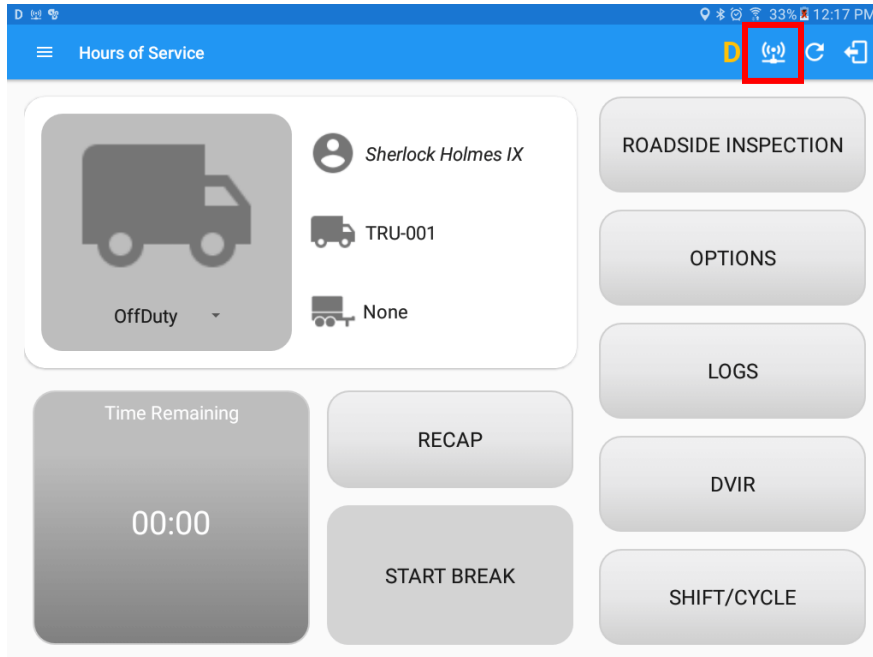


ELD Not Connected:

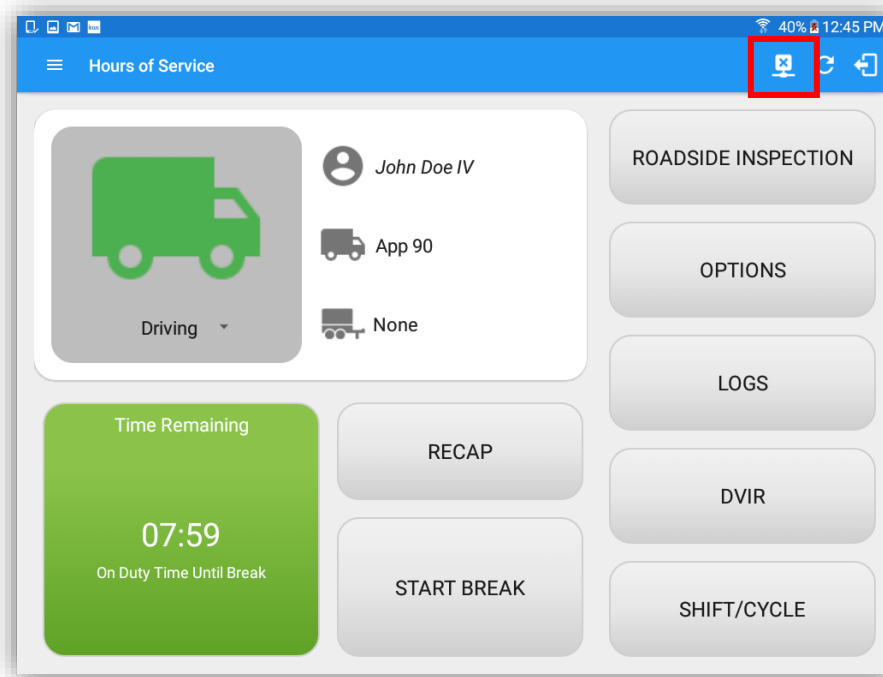


If ELD not connected and Yellow Bar is present:

Press “Connect” and follow the instructions in the Installation Guide to complete connection.

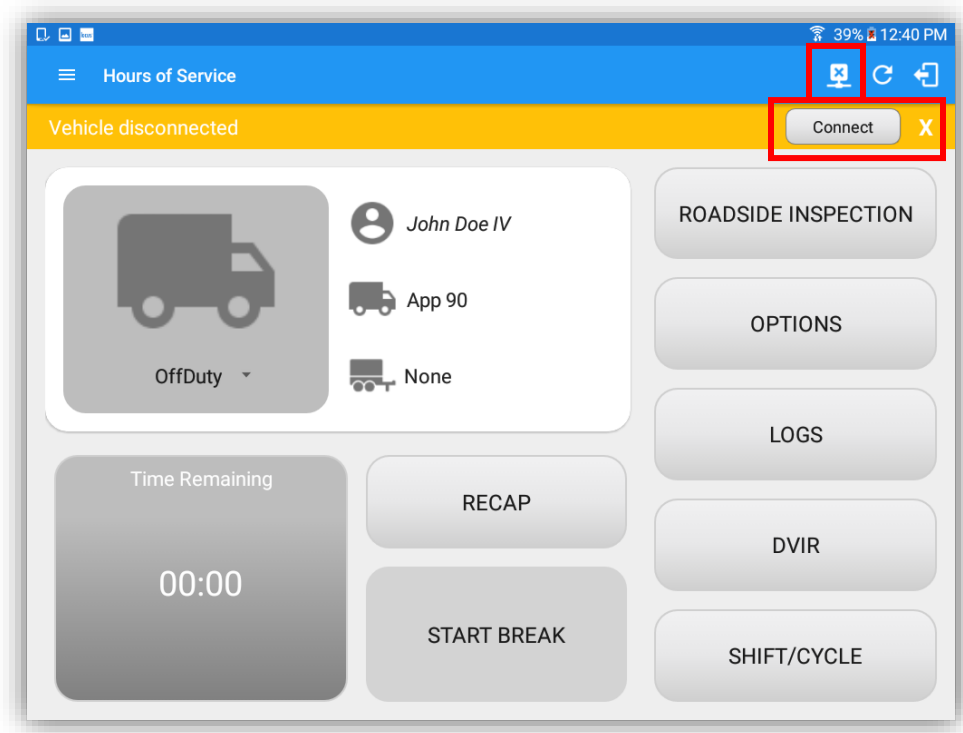

If a Rotating Gear icon is present follow the steps below:

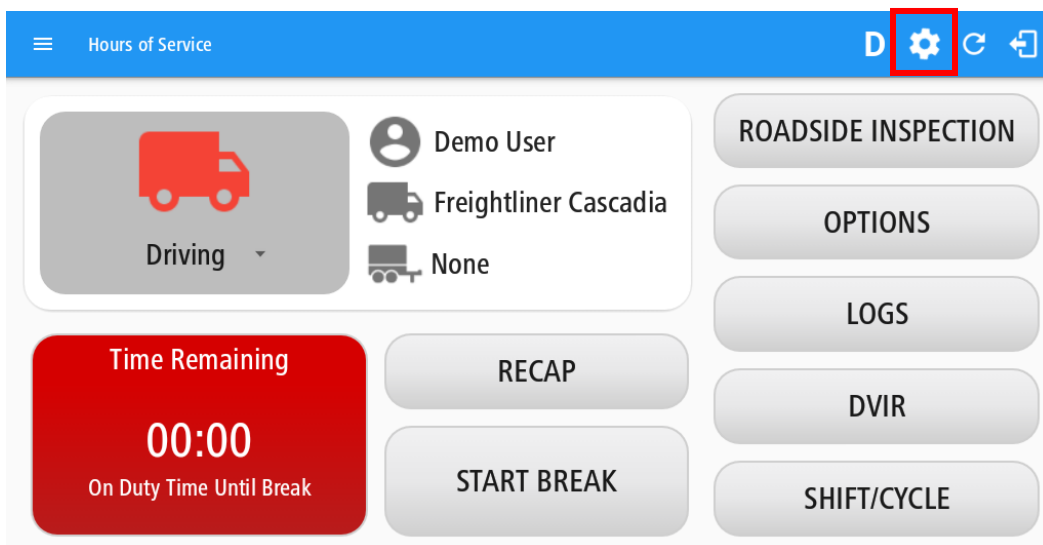

1. Press rotating gear icon.
2. Select “Stop Connection”
3. The Yellow Bar should now be present as shown above.