



## Changing the GPS Receiver in Locus ELD Application


### 1. Open Sidebar Menu and Select “Settings.”

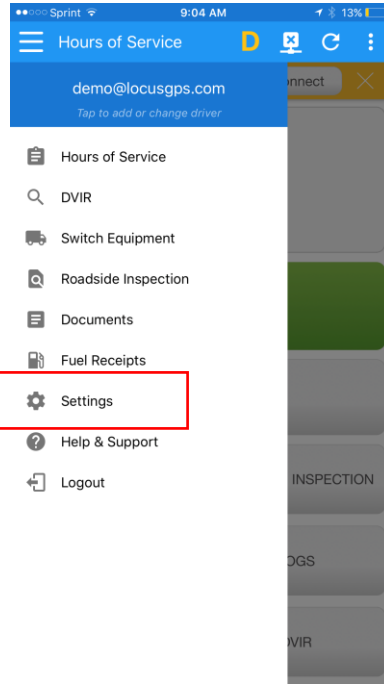

### 2. In Settings, Select GPS Options

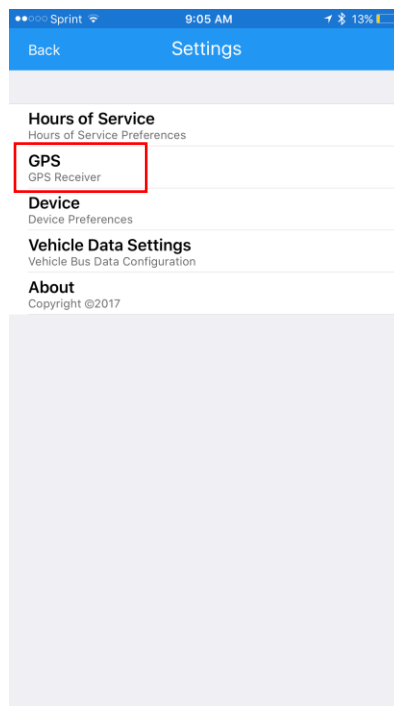

### 3. Select GPS Receiver

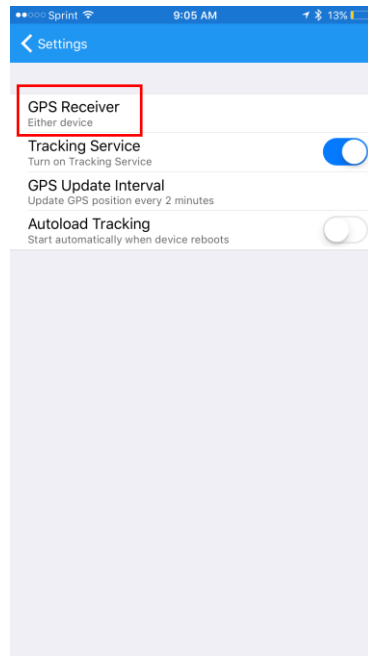

### 4. Choose either the smartphone/tablet GPS or the VBUS/ELD GPS.

