

Viewing Raw Engine Data From ELD


Some technical support situations may require the user to determine that the engine computer is properly making the required engine metrics available to the ELD.

These engine metrics are:


- Engine Speed
- Engine RPM
- Odometer
- Engine Hours

To verify that the engine computer is making these metrics available, follow these steps:

From the Main Menu, click the Connected ELD Icon highlighted below.

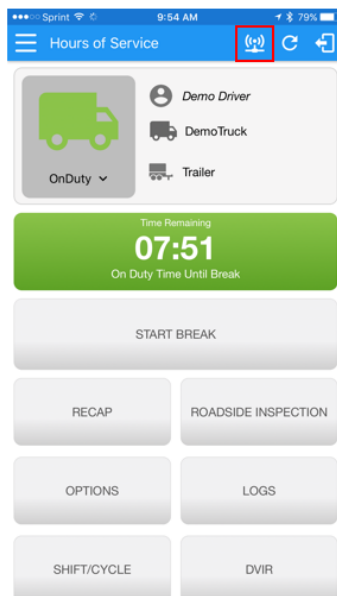

A Connection Detail box will pop up. Click on the Debug button.

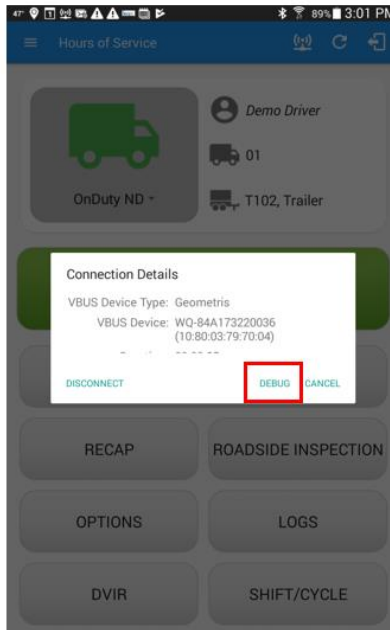

The raw engine data will now be visible as shown below.

